RoamSat

Instructions for Customer Supplied Starlink

STEP 1: Plug in both the ethernet Cable (right) and the DC Power Cable (Left) and orient the antenna as follows The Starlink antenna pocket should face the REAR of the RoamSat.

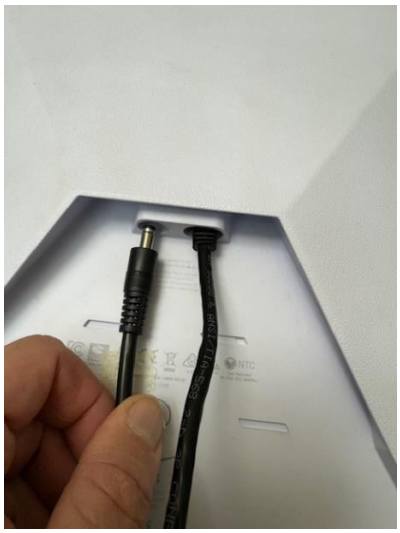

** Although we have tested your unit prior to shipping, at this time you can cycle the power using the battery switch on the front to verify the blue power LED illuminates on the underside of the Starlink antenna.

STEP 2: Lay Starlink flat into the RoamSat base. Install lid with the centered perimeter hole facing the rear. When the screw holes are aligned the dish will center itself.

STEP 3: Insert the (2) short screws in front followed by the (15) longer ¼-20 screws around the perimeter. Do not overtorque screws.. The whitelid seals to the black base with an 1/8" rubber oring,

Congradulations, you have installed your Starlink antenna and your RoamSat is ready for use!